Kinetic Wireless Switches (1/2/3 Gang) and Receivers

The receiver connects to 240 V and must be installed by a licensed electrician (AS/NZS 3000). We recommend the electrician fits the switch too.

IN THE BOX


- 1 × kinetic switch with adhesive tape
- Receiver: sold separately

YOU WILL NEED

- Cloth and alcohol wipe (for the switch)
- Screwdriver (electrician, receiver)
- Phone with Smart Life app (WiFi receiver)

BEFORE YOU START

- Order a receiver – the switch does nothing on its own.
- Check the light load is within the receiver's rating, and there is room near the light for the receiver (about 89 × 44 × 31 mm).
- WiFi receiver: have your 2.4 GHz WiFi name and password ready.

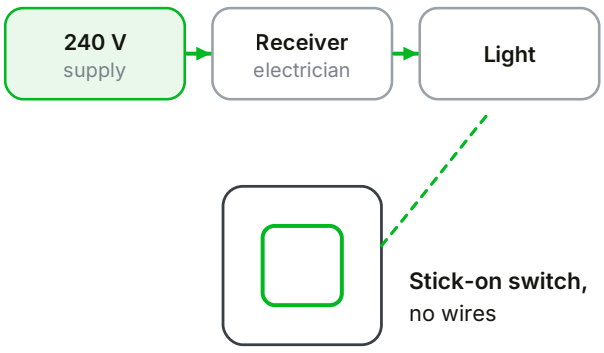

STEP BY STEP

1. Electrician: turn off the circuit and wire the receiver between the supply (active and neutral) and the light, inside the fitting or ceiling space. Fix it with its screw or tape, away from metal.
2. Electrician: restore power and check the light works.
3. Hold the receiver's pairing button for 3 seconds until the light flashes slowly.
4. Press the switch button you want to use once. The receiver light goes off – pairing is done.
5. Clean the wall or glass where the switch goes and let it dry.
6. Peel the tape and press the switch firmly in place, or screw it to the wall.

SETTINGS & USE

- Directional (2 gang): with the receiver flashing, press the switch 4 times within 1 second. Then left = off/dim down, right = on/brighten.
- 2-channel receiver: press its pairing button twice quickly to swap to the second output, then pair a switch for that output.
- Clear all switches: hold the receiver button about 12 seconds until the light goes off. Each channel remembers up to 10 switches.
- WiFi receiver: when powered it flashes fast (twice a second) – add it in the Smart Life app. Not flashing fast? Hold its button 10 seconds.

DO NOT

- Don't wire the receiver yourself – it is 240 V.
- Don't mount the receiver inside a metal box or behind metal – it blocks the signal.
- Don't go over the receiver's load rating.

CARE & TROUBLESHOOTING

- Wipe the switch with a damp cloth – it is waterproof.
- Switch not working? Pair it again (it has no battery).

Installation: Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** Switches 3 years; receivers 2 years. Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.