Premium Glass Switch Cover – 1 to 4 Gang

The cover fits a 240 V switch: turn the power off first, and have a licensed electrician fit it.

IN THE BOX


- 1 × crystal glass cover plate (1, 2, 3 or 4 gang)

YOU WILL NEED

- Small flat screwdriver
- Soft cloth

BEFORE YOU START

- Check the cover has the same number of gangs as your switch.
- Check your switch is a Greenhse crystal glass smart (WiFi) model with a 118 × 72 mm front, the same size as the cover.
- Turn off the power to the switch at the switchboard.

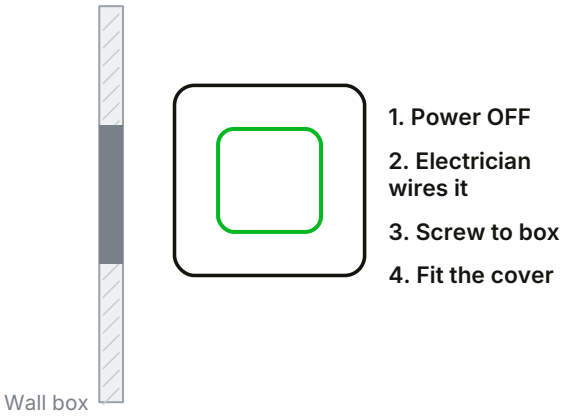

STEP BY STEP

1. Gently lever the old glass cover off the switch with a small flat screwdriver.
2. Wipe the front of the switch clean and dry.
3. Line up the new cover so the touch circles sit over the touch buttons.
4. Press the cover on evenly until it clicks and sits flat.
5. Turn the power back on.
6. Touch each button to check every light turns on and off.

DO NOT

- Do not fit it to other brands or non-WiFi switches.
- Do not force or bend the glass – it can crack.
- Do not fit it with the power on.

CARE & TROUBLESHOOTING

- Wipe the glass with a soft, damp cloth. No harsh cleaners.
- If a button stops responding, check the cover sits flat and clicked in.

Installation: Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** 2 years (does not cover accidental or installation damage). Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.