
Premium Glass Switch Cover – 1 to 4 Gang

A replacement glass front for Greenhse crystal glass smart (WiFi) touch switches.

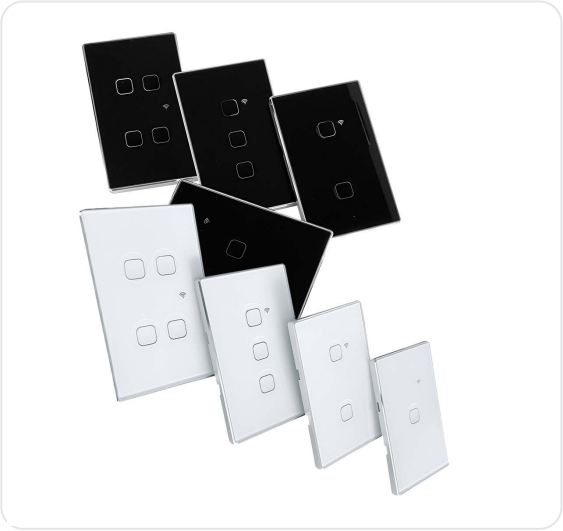

KEY FEATURES

- Fits Greenhse crystal glass smart (WiFi) switches only
- Made for 1, 2, 3 or 4 gang switches
- Black or white crystal glass with a WiFi symbol
- Scratch-resistant glass
- Cover only – the switch mechanism is not included

IN THE BOX

- 1 × crystal glass cover plate (1, 2, 3 or 4 gang)

SPECIFICATIONS

Type	Replacement glass cover plate
Fits	Greenhse crystal glass smart (WiFi) switches
Gangs	1, 2, 3 or 4
Colour	White or black, with WiFi symbol
Material	Scratch-resistant crystal glass
Size	118 × 72 × 7 mm
Switch mechanism	Not included
Warranty	2 years (not accidental or installation damage)

OPTIONS

Option	Colour
1 gang	White or black
2 gang	White or black
3 gang	White or black
4 gang	White or black

Installation: licensed electrician recommended – see the installation guide. Keep your invoice for warranty.

Premium Glass Switch Cover – 1 to 4 Gang

ABOUT THIS PRODUCT

The Premium glass cover is a replacement crystal glass front for Greenhse smart WiFi touch switches. It refreshes a scratched or chipped switch, or changes its colour, without replacing the switch itself. Made from scratch-resistant crystal glass with a printed WiFi symbol, it comes in white or black for 1, 2, 3 or 4 gang switches. Only the glass is supplied, so the existing switch stays on the wall and keeps its settings.

MORE DETAILS

Fits	Greenhse smart WiFi touch switches, 118 × 72 mm
Symbol	WiFi symbol printed on the glass
Electrical parts	None, cover only

SAFETY & COMPLIANCE

No electrical parts
This product has no wiring or electronics, so no electrical certificate applies.

Fits Greenhse smart WiFi touch switches (switch certificate)	SAA-212469-EA (valid to 22 Dec 2026)

This product is a non-electrical accessory. Use it only with the certified Greenhse products it is made for.