INSTALLATION GUIDE

Product code: P36-30×120-CCT

30 × 120 cm 36 W Back-Lit LED Panel – Low Glare, Tricolour

Must be installed by a licensed electrician (AS/NZS 3000) – turn the power off at the switchboard before starting.

IN THE BOX

- 1 × 36 W LED panel (295 × 1195 × 32 mm)
- 1 × LED driver (separate)

YOU WILL NEED

- Step ladder
- Screwdriver
- Clean cotton gloves (to keep the panel clean)

BEFORE YOU START

- Made for standard 300 × 1200 mm suspended (grid) ceilings.
- Set the colour switch before fitting.
- Plasterboard ceiling? It needs a 270 × 1170 mm cut-out and recess clips (not included).
- Indoor, dry areas only.

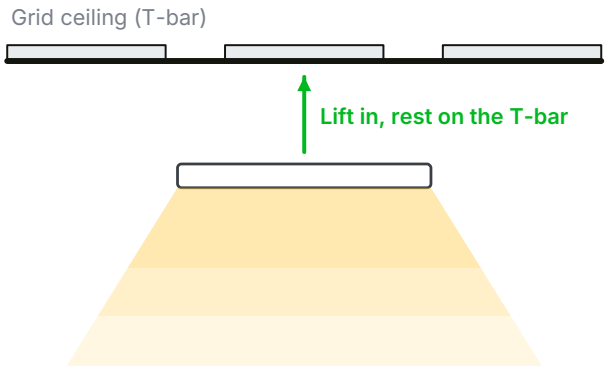

STEP BY STEP

1. Turn the power off at the switchboard.
2. Lift out a ceiling tile (or the old fitting) from the grid.
3. Set the colour switch to 3000 K, 4000 K or 5700 K.
4. Plug the panel lead into the driver.
5. Connect the driver to the 240 V supply above the ceiling, following the label on the driver. No earth is needed (Class II).
6. Tilt the panel up through the opening and lower it so it sits flat on the grid rails.
7. Turn the power on and test.

SETTINGS & USE

- Colour switch: 3000 K, 4000 K or 5700 K.
- Need dimming? Order the optional dimmable driver with the panel.

DO NOT

- Don't connect the panel straight to 240 V – always use the driver.
- Don't use in wet areas or outdoors.
- Don't press on the diffuser face when fitting.

CARE & TROUBLESHOOTING

- Turn the power off, then dust with a soft dry cloth.
- If it flickers or won't light, check the plug between panel and driver.

Installation: Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** 3 years. Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.