70 mm 6 W Tilting LED Downlight – Tricolour

Only a licensed electrician may fit this light and its ceiling plug socket (AS/NZS 3000).

IN THE BOX

- 1 × LED downlight with built-in driver, spring clips, lead and plug

YOU WILL NEED

- 70 mm hole saw
- Voltage tester
- Stable ladder

BEFORE YOU START

- Turn off the power at the switchboard and test that it is off.
- Only use it indoors in dry areas (IP50) – not in showers or outdoors.
- An electrician fits a ceiling plug socket (plug base) on the switched lighting circuit near each light.
- Check there is at least 68 mm of space above the ceiling.

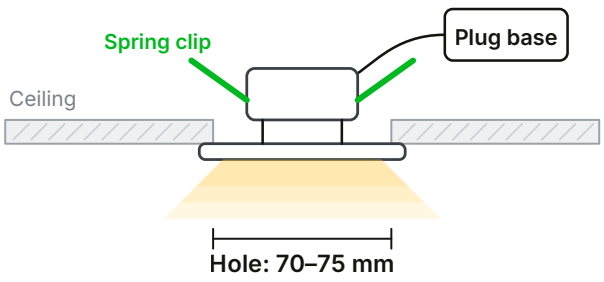

STEP BY STEP

1. Cut a 70–75 mm hole in the ceiling.
2. Set the colour switch on the light to 3000 K, 4000 K or 5700 K.
3. Plug the light's lead into the ceiling plug socket.
4. Fold the spring clips up and push the light into the hole.
5. Turn the power on and check the light works.
6. Tilt the head (up to 30°) to aim the light.

SETTINGS & USE

- Colour switch: 3000 K warm white, 4000 K natural white, 5700 K bright white.
- Dimming: use a Triac dimmer made for LED lights.

DO NOT

- Do not use in wet areas or outdoors.
- Do not force the head past 30°.
- Do not open the light – there are no parts you can replace.

CARE & TROUBLESHOOTING

- Turn the power off, then wipe the front with a soft dry cloth.
- If it flickers when dimmed, raise the dimmer's minimum level or try another LED dimmer.

Installation: Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** 3 years. Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.