Supernova II 3-in-1 Bathroom Heater – 2 Lamp

Must be installed by a licensed electrician (AS/NZS 3000) – the heat lamps get extremely hot, so let them cool before touching.

IN THE BOX


- 1 × Supernova II heater unit
- 2 × 275 W infrared heat lamps
- 1 × 3-gang wall switch
- 1 × flexible aluminium duct
- 1 × exterior grille and duct clamps

YOU WILL NEED

- Plaster saw
- Screwdriver
- Tape measure and pencil
- Safety glasses and dust mask

BEFORE YOU START

- For ceilings up to 2.4 m high, indoors only.
- Total load is about 600 W (2 × 275 W lamps, 40 W fan, 12 W light) – check the circuit can take it.
- Allow at least 150 mm above and 400 mm from walls.
- Place it over the spot where people dry off.
- Keep it away from water splashing onto the lamps. Plan the duct run to an outside wall before cutting.

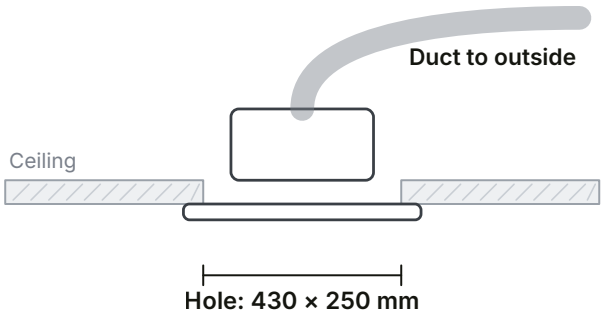

STEP BY STEP

1. Turn the power off at the switchboard.
2. Mark a 430 × 250 mm hole between the joists, check for cables, then cut it.
3. Wire the unit and the 3-gang wall switch as shown on the instruction sheet in the box.
4. Clamp the flexible duct to the outlet and run it to the exterior grille on an outside wall.
5. Lift the unit into the hole and secure it as shown in the instruction sheet.
6. Fit the two heat lamps.
7. Power on and test the heat, fan and light switches.

SETTINGS & USE

- Heat switch: both heat lamps on – heat is instant.
- Fan and light each have their own switch.
- Safety: the fan turns itself on if the inside of the unit goes over 80 °C.

DO NOT

- Don't fit it on a sloping ceiling or a wall.
- Don't leave the heat lamps on for long periods.
- Don't touch the lamps until they have cooled.

CARE & TROUBLESHOOTING

- Power off, let the lamps cool, then wipe the lamps and fascia with a soft damp cloth.
- Keep the duct and outside grille clear. Replacement lamps: 275 W R125 E27 infrared.

Installation: Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** 3 years replacement. Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.