INSTALLATION GUIDE

Product code: gh-exit-sign

LED Emergency Exit Sign – Wall or Ceiling Mount

240 V emergency light: it must be installed by a licensed electrician to AS/NZS 3000, on an unswitched active supply.

IN THE BOX

- 1 × LED exit sign
- 1 × mounting bracket
- 4 × decals: 2 × running man, 1 × left arrow, 1 × right arrow

YOU WILL NEED

- Drill with 20 mm bit
- Screwdriver
- Fixings to suit the wall or ceiling
- Wire stripper and voltage tester

BEFORE YOU START

- Turn off the power at the switchboard and test it is dead.
- Use an unswitched active, so the light switch can't turn the sign off.
- Pick the decal(s) you need: running man, left or right arrow.

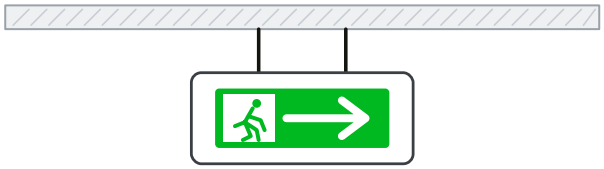

Unswitched supply keeps the battery charged

Use the test button to check

STEP BY STEP

1. Wall mounting: first drill screw holes in the bracket. Hold the bracket in place and mark the screw holes and cable entry, leaving room at both ends to slide the sign on.
2. Drill a 20 mm hole for the cable. Screw the bracket into solid material.
3. Feed the cable through the bracket and connect unswitched active, neutral and earth to the terminal block, with no bare wire showing.
4. Slide the chosen decal into the diffuser: top edge first, then the sides, then flex in the bottom edge.
5. Slide the sign onto the bracket until it clicks in, then turn the security lock to 'Lock' with a screwdriver.
6. Turn the power on – the sign and green charge light come on. After a few minutes, hold the test button on the side: the sign should stay lit on battery.
7. Leave the power on for 16 hours to fully charge the battery.

SETTINGS & USE

- Green charge light ON = mains is on and the battery is charging.
- Test button on the side: hold it to switch the sign to battery power.
- If the mains power fails, the sign stays lit on its battery for more than 2 hours (when fully charged).

DO NOT

- Don't connect it to a switched or dimmed circuit.
- Don't use it outdoors or in wet areas – it is IP20.
- Don't leave it without power for long – the battery will run flat.

CARE & TROUBLESHOOTING

- Monthly: check the green charge light is on.
- Every 6 months: a licensed electrician checks the sign stays lit on battery for at least 90 minutes and logs it (AS/NZS 2293.2).
- Wipe with a soft dry cloth. If it doesn't stay lit on test, call Greenhse.

Installation: Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** 2 years (sign), 1 year (battery). Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.